

ENGLISH

Sonicare For Kids (Fig. 1)

- A Hygienic travel cap
- B Brush head
- C Handle with soft grip
- D Power on/off button with battery charge indicator
- E Interchangeable panel
- F Brushing mode button with mode lights
- G Charger with brush head holder

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE

DANGERS

To reduce the risk of electrocution:

- 1 Do not place or store the product where it can fall or be pulled into a tub or sink.
- 2 Do not place the product in or drop it into water or any other liquid.
- 3 Do not reach for a product that has fallen into water. Unplug immediately.
- 4 Do not use the product while bathing.

WARNINGS

To reduce the risk of burns, electrocution, fire to persons:

- 1 Discontinue use if this product appears damaged in any way (brush head, handle, charger). This product contains no serviceable parts. Refer to chapter 'Guarantee and service' if your Sonicare no longer works properly or needs repair.
- 2 Never use the charger if it has a damaged cord or plug.
- 3 Keep the cord away from heated surfaces.
- 4 Do not use the charger outdoors.
- 5 Do not use the charger if dropped into water.
- 6 This product is designed to clean your teeth, gums and tongue only. Use this product only for its intended use as described in this booklet. Discontinue use of this product and contact a physician/dentist if discomfort or pain is experienced.
- 7 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 8 Children should be supervised to ensure that they do not play with the appliance.
- 9 Do not use attachments other than those recommended by the manufacturer.
- 10 If your toothpaste contains peroxide, baking soda or other bicarbonate (common in whitening toothpastes), thoroughly clean the brush head and the handle with soap and water after each use. Otherwise the plastic may crack.

MEDICAL WARNINGS

- 1 Consult your dental professional before you use this product if you have had oral or gum surgery in the previous 2 months.
- 2 Contact your dental professional if excessive bleeding occurs after using this product or bleeding continues to occur after 1 week of use.
- 3 If you have a pacemaker or other implanted device contact your physician or the device manufacturer prior to use.
- 4 Sonicare has been tested and is compliant with safety standards for electromagnetic devices.
- 5 Consult your physician prior to using the Sonicare if you have medical concerns.

NOT A TOY

CHECK BRUSH HEADS REGULARLY, CRACKS FROM DROPPING CAN LEAD TO CHOKING HAZARD

SAVE THESE INSTRUCTIONS

Getting started

Applying the interchangeable panel

The Sonicare For Kids comes with 3 different interchangeable panels.

- 1 Remove the adhesive backing from the panel.
- 2 Apply the panel to the white section on the front of the handle (Fig. 2).

Note: Make sure you line up the cut-out areas on the panel with the buttons on the front of the handle.

Reapplying a panel that has been removed

- 1 Rinse the panel in warm water; you may also use a mild detergent to clean it.
- 2 Let the panel air dry.

- 3 Reapply the panel to the white section on the front of the handle.

Attaching the brush head

- 1 Align the brush head so the bristles point in the same direction as the front of the handle (Fig. 3).

- 2 Firmly press the brush head onto the metal shaft until it stops.

Note: There is a small gap between the brush head and the handle.

Charging your Sonicare

- 1 Plug the charger into a live electrical outlet.

- 2 Place the handle on the charger (Fig. 4).

The battery charge indicator in the power on/off button flashes to indicate that the toothbrush is charging.

When the Sonicare is fully charged, the battery charge indicator stops flashing and remains on.

Note: If the battery charge of your Sonicare is low, you hear 3 beeps and the battery charge indicator flashes rapidly for 30 seconds after the brushing cycle.

Note: To keep the battery fully charged at all times, you may keep your Sonicare on the charger when not in use. When the battery is fully charged, the charger draws minimal energy from the electrical outlet. It takes at least 24 hours to fully charge the battery.

Tip: For extra convenience during travel, you can remove the travel charger and use it without the charger cover.

Using the Sonicare For Kids

Brushing instructions

For children under age 8, it is recommended that a parent or adult caregiver perform tooth brushing.

- 1 Wet the bristles and apply a small amount of toothpaste.

- 2 Place the toothbrush bristles against the teeth at a slight angle towards the gumline (Fig. 5).

- 3 Press the power on/off button to turn on the Sonicare.

4 Apply light pressure to maximize Sonicare's effectiveness and let the Sonicare toothbrush do the brushing for you.

5 Gently move the brush head slowly across the teeth in a small back and forth motion so the longer bristles reach between the teeth. Continue this motion throughout the brushing cycle.

Note: To make sure you brush evenly throughout the mouth, divide the mouth into 4 sections using the KidPacer feature (see chapter 'Features').

6 Begin brushing in section 1 (outside top teeth) a series of musical notes indicate it is time to move to section 2 (inside top teeth). At the next series of notes move to section 3 (outside bottom teeth). The next series of notes indicate it is time to move to section 4 (inside bottom teeth). The toothbrush will automatically turn off at the end of the brushing cycle (Fig. 6).

7 After you have completed the brushing cycle, you can spend additional time brushing the chewing surfaces of your teeth and areas where staining occurs. You may also brush your tongue, with the toothbrush turned on or off, as you prefer (Fig. 7).

Your Sonicare is safe to use on:

- Braces (brush heads wear out sooner when used on braces)
- Dental restorations (fillings, crowns, veneers)

Brushing modes

The toothbrush automatically starts in the default high mode.

- 1 Press the brushing mode button to toggle between modes (Fig. 8).

- The green mode light indicates the selected mode.
- High mode: Full-strength mode designed for older/independent brushes.
- Low mode: Reduced power mode used for training and introducing younger children to the sonic experience.

Features

KidTimer

- The KidTimer plays a congratulatory sound sequence at the end of the pre-determined brushing time. Additionally, the KidTimer automatically turns off the handle when the brushing cycle is complete.
- When in high mode, the KidTimer is set at 2 minutes.
- When in low mode the KidTimer is set at 1 minute and slowly increases over time. The progression of time helps young children reach the dentist recommended 2 minutes of brushing.

Note: Instruct your child to brush until they hear the congratulatory tune and the toothbrush turns off.

KidPacer

The KidPacer uses a short series of musical notes to alert the brusher to move to the next brushing quadrant of the mouth. This ensures that the child gets a thorough, overall clean (see 'Brushing instructions').

Easy-start

- The Sonicare For Kids comes with the Easy-start feature activated.
- The Easy-start feature gently increases the power over the first 14 brushings.

Note: Each of the first 14 brushings must be at least 1 minute in length to properly advance through the Easy-start ramp-up cycle.

Deactivating or activating the Easy-start feature

- 1 Attach the brush head to the handle.

- 2 Place the handle in the plugged-in charger.

- To deactivate Easy-start:

Press and hold the power on/off button for 2 seconds. You hear 1 beep to indicate that the Easy-start feature has been deactivated.

- To activate Easy-start:

Press and hold the power on/off button for 2 seconds. You hear 2 beeps to indicate that the Easy-start feature has been activated.

Note: Using the Easy-start feature beyond the initial ramp-up period is not recommended and reduces Sonicare's effectiveness in removing plaque.

Cleaning

Do not clean brush heads, handle, charger, charger cover or interchangeable panels in the dishwasher.

Toothbrush handle

- 1 Remove the brush head and rinse the metal shaft area with warm water (Fig. 9).

Do not push on the rubber seal on the metal shaft with sharp objects, as this may cause damage.

- 2 Use a damp cloth to wipe the entire surface of the handle.

Brush head

- 1 Rinse the brush head and bristles after each use (Fig. 10).

- 2 Remove the brush head from the handle and rinse the brush head connection at least once a week with warm water (Fig. 10).

Charger

- 1 Unplug the charger before cleaning.

- 2 Use a damp cloth to wipe the surface of the charger.

Storage

- If you are not going to use the Sonicare for an extended period of time, unplug the charger from the electrical outlet, clean it and store it in a cool and dry place away from direct sunlight.
- You can store a brush head on the brushing head holder at the back of the charger.

Replacement

Brush head

- Replace Sonicare brush heads every 3 months to achieve optimal results.
- Use only Sonicare For Kids replacement brush heads.

Disposal

- The rechargeable battery inside your Sonicare cannot be replaced, but it is easy to remove for recycling. At the end of the toothbrush's life and prior to disposal, please remove the rechargeable battery from the handle by following the instructions below.
- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 11).
- The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard the appliance, and recycle or dispose of the battery according to local waste management requirements.
- If you have any recycling questions, contact your local waste management office.

Removing the rechargeable battery

Please note that this process is not reversible.

- To remove the rechargeable battery, you need a flat-head (standard) screwdriver. Observe basic safety precautions when you follow the procedure outlined below. Be sure to protect your eyes, hands, fingers, and the surface on which you work.

- 1 To deplete the rechargeable battery of any charge, remove the handle from the charger, turn on the Sonicare and let it run until it stops. Repeat this step until you can no longer turn on the Sonicare.

- 2 Insert a screwdriver into the slot located in the bottom of the handle and turn counterclockwise until you see a gap between the bottom cap and the handle (Fig. 12).

- 3 Insert the screwdriver into the gap and pry the bottom cap out of the handle (Fig. 13).

- 4 Hold the handle upside down and push down on the shaft to release the internal components of the handle (Fig. 14).

- 5 Insert the screwdriver under the circuit board, next to the battery connections, and twist to break the connections. Remove the circuit board and pry the battery from the plastic carrier (Fig. 15).

The rechargeable battery can now be recycled or disposed of and the rest of the product discarded appropriately.

Guarantee and service

Philips guarantees its products for two years after the date of purchase. Defects due to faulty materials and workmanship will be repaired or replaced. Philips expense provided that convincing proof of purchase in the qualifying period is provided.

Contact our Consumer Care Center at 1-800-682-7664 (North America), outside North America contact your local Philips Consumer Care Center.

WARRANTY EXCLUSIONS

What is not covered under warranty:

- Brush heads
- Interchangeable panels
- Damage caused by misuse, abuse, neglect, alterations or unauthorized repair.
- Normal wear and tear; including chips, scratches, abrasions, discoloration or fading.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THE EXPRESS WARRANTIES SET FORTH ABOVE. IN SOME STATES LIMITATIONS ON DURATION OF IMPLIED WARRANTIES DO NOT APPLY.

LIMITATION OF REMEDIES

IN NO EVENT SHALL PHILIPS OR ANY OF ITS AFFILIATED OR SUBSIDIARY COMPANIES BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES BASED UPON BREACH OF WARRANTY, BREACH OF CONTRACT, NEGLIGENCE, TORT, OR ANY OTHER LEGAL THEORY. SUCH DAMAGES INCLUDE, WITHOUT LIMITATION, LOSS OF SAVINGS OR REVENUE; LOSS OF PROFIT; LOSS OF USE OF THE CLAIMS OF THIRD PARTIES INCLUDING, WITHOUT LIMITATION, DENTISTS AND DENTAL HYGIENISTS; AND COST OF ANY SUBSTITUTE EQUIPMENT OR SERVICES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.

7 After you have completed the brushing cycle, you can spend additional time brushing the chewing surfaces of your teeth and areas where staining occurs. You may also brush your tongue, with the toothbrush turned on or off, as you prefer (Fig. 7).


Your Sonicare is safe to use on:

- Braces (brush heads wear out sooner when used on braces)
- Dental restorations (fillings, crowns, veneers)

Brushing modes

The toothbrush automatically starts in the default high mode.

- 1 Press the brushing mode button to toggle between modes (Fig. 8).

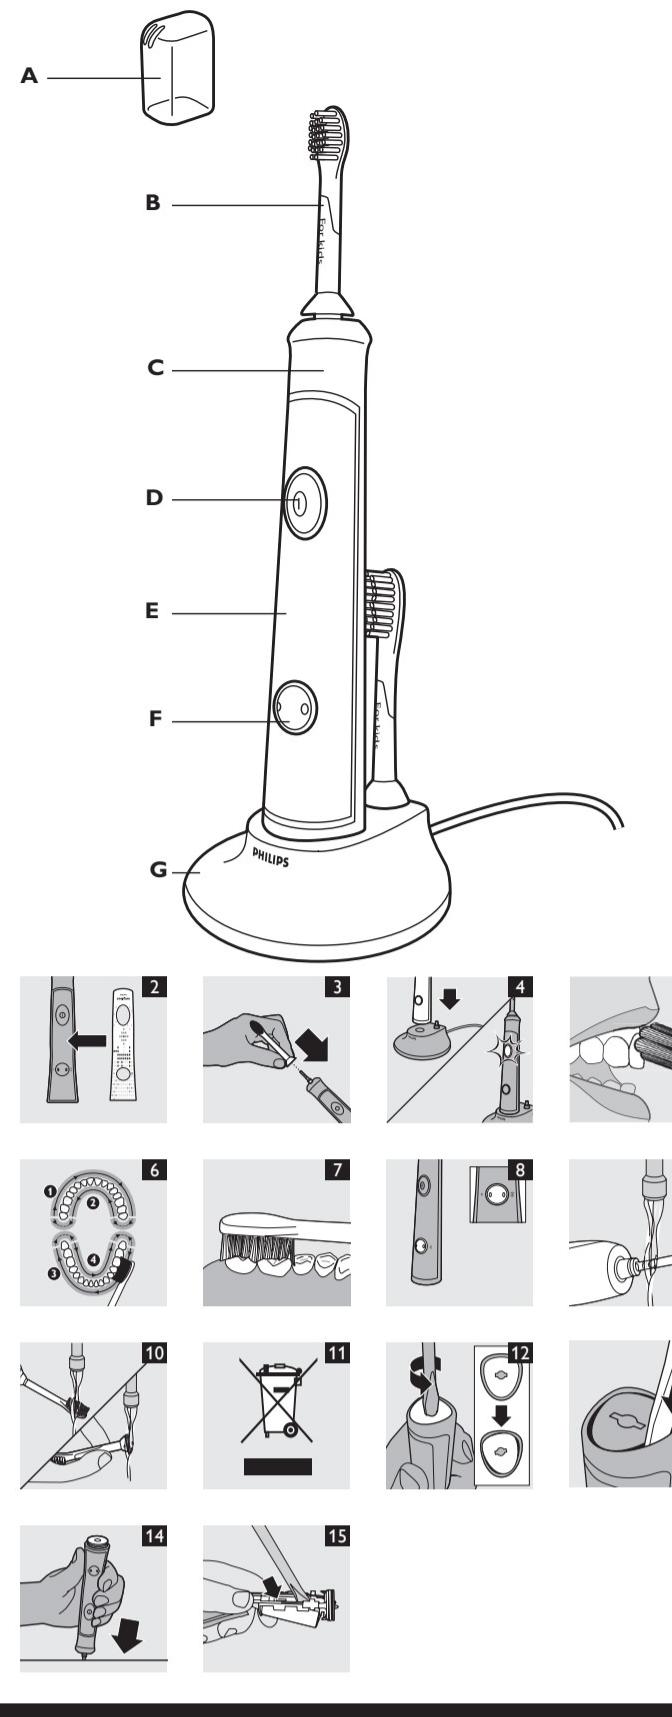

Printed in U.S.A.
Printed on 100% recycled paper

<

- En mode maximum, la fonction KidTimer est réglée à 2 minutes.
- En mode minimum, la fonction KidTimer est réglée à 1 minute, et ce délai augmente progressivement avec le temps pour aider les enfants à atteindre une durée de brossage de 2 minutes conformément aux recommandations des dentistes.

Remarque : Expliquez à votre enfant qu'il doit se brosser les dents jusqu'à ce qu'il entende la mélodie et que la brosse s'éteigne.

KidPacer

La fonction KidPacer émet une série de brèves notes musicales pour indiquer qu'il est temps de passer à la section suivante de la bouche, pour favoriser un brossage complet (voir la section Directives de brossage).

Easy-start

- La fonction Easy-start de la brosse Sonicare pour enfants est activée par défaut.
- Cette fonction augmente progressivement la puissance lors des 14 premiers brossages.

Remarque : Chacun des 14 premiers cycles de brossage doit durer au moins 1 minute pour que la fonction Easy-start se déroule correctement.

Désactivation ou activation de la fonction Easy-start

- 1 Fixez la tête de brosse au manche.
- 2 Placez le manche sur le chargeur branché.

- Pour désactiver la fonction Easy-start : Appuyez sur le bouton marche/arrêt et maintenez-le enfoncé pendant 2 secondes. Vous entendrez un bip qui vous indiquera que la fonction Easy-start est désactivée.

- Pour réactiver la fonction Easy-start : Maintenez le bouton marche/arrêt enfoncé pendant 2 secondes. 2 signaux sonores vous indiqueront que la fonction Easy-start est active.

Remarque : Il est recommandé de ne pas dépasser la période initiale d'utilisation de la fonction Easy-start, au risque de réduire l'efficacité de la brosse à dents Sonicare à éliminer la plaque dentaire.

Nettoyage

Ne lavez pas les têtes de brossage, le manche, le chargeur ou l'étui de chargeur au lave-vaisselle.

Manche de la brosse à dents

- 1 Retirez la tête de brossage et rincez la zone de la tige en métal avec de l'eau tiède (fig. 9).

Ne poussez pas sur le joint d'étanchéité en caoutchouc de la tige en métal avec un objet pointu, car vous pourriez l'endommager.

- 2 Utilisez un chiffon humide pour essuyer la surface du manche.

Tête de brosse

- 1 Rincez la tête de brossage et les soies après chaque utilisation (fig. 10).

- 2 Retirez la tête de brossage du manche et rincez le raccord de la tête de brosse au moins une fois par semaine avec de l'eau tiède (fig. 10).

Chargeur

- 1 Débranchez le chargeur avant le nettoyage.

- 2 Utilisez un chiffon humide pour essuyer la surface du chargeur.

Rangement

- Si vous prévoyez de ne pas utiliser la Sonicare pour une longue période, débranchez le chargeur et rangez la brosse dans un endroit frais et sec, à l'abri des rayons du soleil.
- Vous pouvez ranger une tête de brossage dans le support à l'arrière du chargeur.

Remplacement

Tête de brossage

- Pour un résultat optimal, remplacez les têtes de brossage Sonicare tous les 3 mois.
- Utilisez uniquement les têtes de brossage Sonicare pour enfants.

Mise au rebut

- La pile rechargeable de votre Sonicare ne peut pas être remplacée, mais peut être facilement retirée pour être recyclée. À la fin de la durée utile du produit et avant de le jeter, retirez la pile du manche en suivant les instructions ci-dessous.

- Ne jetez pas l'appareil avec les ordures ménagères à la fin de sa vie utile; déposez-le plutôt dans un point de collecte de recyclage. Vous contribuerez ainsi à la protection de l'environnement (fig. 11).

- La pile rechargeable intégrée contient des substances qui peuvent nuire à l'environnement. Veillez à toujours retirer la pile avant de mettre l'appareil au rebut, et recycler ou jetez la pile conformément aux exigences de gestion des déchets de votre municipalité.

- Si vous avez des questions concernant le recyclage, adressez-vous à votre bureau local de gestion des déchets.

Pour retirer la pile rechargeable

Veuillez noter que ce processus n'est pas réversible.

- Pour retirer les piles rechargeables, vous aurez besoin d'un tournevis (standard) à tête plate. Il est essentiel d'observer les mesures de sécurité fondamentales quand vous effectuez le procédé décrit ci-dessous. Assurez-vous de protéger vos yeux, mains et doigts ainsi que la surface sur laquelle vous travaillez.

- 1 Pour vider complètement la pile, retirez le manche du chargeur, mettez l'appareil en marche et laissez-le fonctionner jusqu'à ce qu'il s'arrête. Répétez cette étape jusqu'à ce que vous ne puissiez plus allumer l'appareil.

- 2 Insérez un tournevis dans la fente située sur la partie inférieure du manche et tournez dans le sens inverse des aiguilles d'une montre jusqu'à ce qu'il y ait un espace entre l'embout inférieur et le manche (fig. 12).

- 3 Insérez le tournevis dans l'espace pour enlever l'embout du manche (fig. 13).

- 4 Tenez le manche sens dessus-dessous et poussez sur la tige pour libérer les composantes internes du manche (fig. 14).

- 5 Insérez le tournevis sous la carte de circuit, à côté des connexions de la pile, et effectuez une torsion pour briser les connexions. Retirez la carte de circuit et dégarez la pile de son support en plastique (fig. 15). La pile rechargeable peut maintenant être recyclée ou jetée et le reste du produit peut être jeté au rebut.

Garantie et services

Philips garantie ses produits pour une période de deux ans après la date d'achat. Si un produit présente des défauts de matériaux ou de fabrication, Philips le réparera ou le remplacera à ses frais si une preuve suffisante est fournie, un reçu par exemple, et qui atteste que la date à laquelle le service est demandé est comprise dans la période de garantie.

Pour communiquer avec le Service à la clientèle, composez le 1 800 682-7664 (Amérique du Nord). Si vousappelez de l'extérieur de l'Amérique du Nord, communiquiez avec le Service à la clientèle Philips de votre pays.

EXCLUSIONS

Ce qui n'est pas couvert par la garantie:


- Les têtes de brosse
- Panneaux interchangeables
- Dommages causés par une mauvaise utilisation, de l'abus, de la négligence ou encore des modifications ou réparations non autorisées.
- L'usure normale, incluant les ébréchures, les égratignures, les abrasions, la décoloration ou l'affaissement des couleurs.

GARANTIES IMPLICITES

TOUTES LES GARANTIES IMPLICITES, Y COMPRIS LES GARANTIES DE QUALITÉ MARCHANDE ET D'ADAPTATION À UN USAGE PARTICULIER, SONT LIMITÉES À LA DURÉE DES GARANTIES EXPRESSES ÉNONCÉES CI-DESSUS. DANS CERTAINS ÉTATS, OU CERTAINES PROVINCES, LES LIMITATIONS DE DURÉE DE GARANTIES IMPLICITES NE S'APPLIQUENT PAS.

RESTRICTION DES RECOURS

NI LA SOCIÉTÉ PHILIPS ORAL HEALTHCARE, INC. NI AUCUNE DE SES SOCIÉTÉS ASSOCIÉES OU FILIALES NE POURRONT EN AUCUN CAS ÊTRE TENUES RESPONSABLES POUR DES DOMMAGES SPÉCIFIQUES, ACCESSOIRES OU CORRÉLATIFS, À LA SUITE D'UNE RUPTURE DE LA GARANTIE, D'UNE FAUTE DÉLICTUELLE OU DETOUTE AUTRE THÉORIE LÉGALE, DE TELS DOMMAGES COMPRENNENT, SANS S'Y LIMITER, UNE PERTE D'ÉCONOMIES OU DE REVENUS; UNE PERTE DE PROFITS; UNE PERTE D'ÉJOUISSANCE; LES REVENDICATIONS DE TIERS, Y COMPRIS, SANS S'Y LIMITER, LES DENTISTES ET HYGIÉNISTES DENTAIRES; AINSI QUE LE COÛT D'ÉQUIPEMENTS OU DE SERVICES DE REMplacement. CERTAINS ÉTATS NE RECONNAissent PAS L'EXCLUSION OU LA LIMITATION DES DOMMAGES ACCESSOIRES OU CORRÉLATIFS.

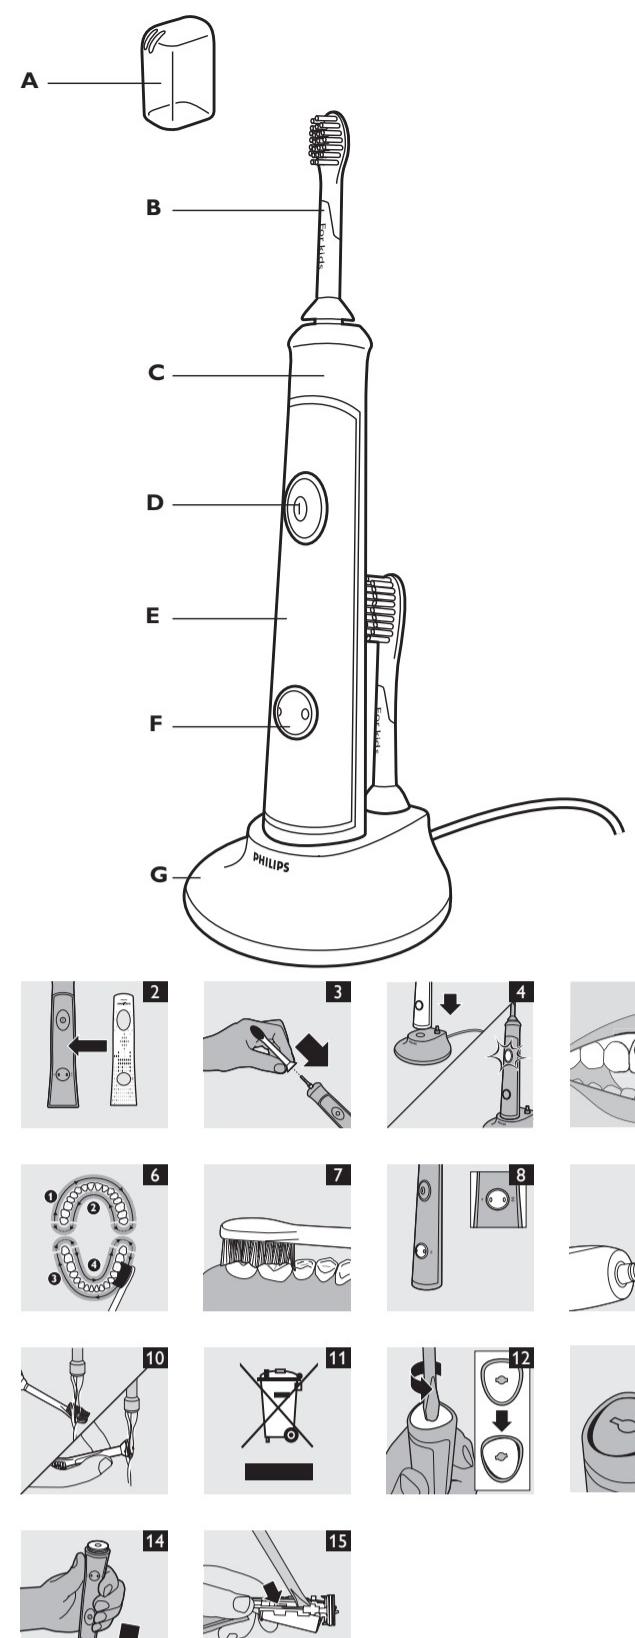

Antes de empezar

Colocación de la carcasa intercambiable

El cepillo Sonicare infantil incluye 3 carcasa intercambiables diferentes.

- 1 Retire el adhesivo de la carcasa.

- 2 Coloque la carcasa en la zona blanca de la parte frontal del mango (fig. 2).

Nota: Asegúrese de que las zonas recortadas de la carcasa coinciden con los botones de la parte delantera del mango.

Volver a colocar una carcasa

- 1 Aclare la carcasa con agua caliente. También puede utilizar un detergente suave para limpiarla.

- 2 Deje secar el panel al aire.

- 3 Vuelva a colocar la carcasa en la zona blanca de la parte frontal del mango.

Cómo fijar el cabezal del cepillo

- 1 Acople el cabezal del cepillo de manera que las cerdas apunten hacia la misma dirección que la parte frontal del mango (fig. 3).

- 2 Presione firmemente el cabezal del cepillo sobre el eje metálico hasta que encaje.

Nota: Hay un pequeño espacio entre el cabezal y el mango.

Carga de Sonicare

- 1 Enchufe el cargador a una toma de corriente activa.

- 2 Coloque el mango en el cargador (fig. 4).

El indicador de carga de la batería del botón de encendido/apagado parpadea para indicar que el cepillo se está cargando.

Nota: Si la batería del cepillo Sonicare está a punto de agotarse, oírá 3 pitidos y el indicador de carga de la batería parpadeará de forma rápida durante 30 segundos tras el ciclo de cepillado.

Nota: Para mantener la batería completamente cargada en todo momento, puede dejar la Sonicare en el cargador cuando no lo esté utilizando. Cuando la batería está completamente cargada, el cargador utiliza la energía mínima de la toma de corriente. Se necesitan al menos 24 horas para cargar completamente la batería.

Consejo: Para mayor comodidad durante los viajes, puede sacar el cargador de viaje y utilizarlo sin la cubierta.

Uso del cepillo Sonicare infantil

Instrucciones de cepillado

Para los niños menores de 8 años, se recomienda que un padre o adulto les muestre cómo cepillarse los dientes.

- 1 Moje las cerdas y aplique una pequeña cantidad de pasta de dientes.

- 2 Coloque las cerdas del cepillo sobre los dientes, formando un ligero ángulo con la línea de las encías (fig. 5).

- 3 Pulse el botón de encendido/apagado para encender su Sonicare.

- 4 Ejerza una ligera presión para maximizar la eficacia de Sonicare y deje que éste se encargue del cepillado.

- 5 Desplace suavemente el cabezal del cepillo por todos los dientes con un pequeño movimiento hacia delante y hacia atrás, de forma que las cerdas más largas lleguen a los espacios interdentales. Continúe con este movimiento durante el ciclo de cepillado.

Nota: Para asegurar el cepillado uniforme de toda la boca, divida la cavidad bucal en 4 secciones mediante la función KidPacer (consulte el capítulo "Características").

- 6 Comience el cepillado por la sección 1 (cara externa dientes superiores). Una serie de notas musicales le indicarán que debe cambiar a la sección 2 (cara interna dientes superiores). En la siguiente serie de notas musicales cambie a la sección 3 (cara externa dientes inferiores). La siguiente serie de notas indican que debe cambiarse a la sección 4 (cara interna dientes inferiores). El cepillo de dientes se apagará automáticamente al final del ciclo de cepillado (fig. 6).

- 7 Despues de completar el ciclo de cepillado, puede dedicar un tiempo adicional al cepillado de la superficie de masticación de los dientes y las zonas donde se forman manchas. También puede cepillarse la lengua, con el cepillo encendido o apagado, como prefiera (fig. 7).

Puede utilizar Sonicare de forma segura en:

- Aparatos correctores (los cabezales se gastan antes cuando se utilizan sobre aparatos correctores)
- Restauraciones dentales (empastes, coronas, carillas)

Modos de cepillado

El cepillo se enciende automáticamente en el modo predeterminado alto.

- 1 Pulse el botón de modo de cepillado para alternar entre los distintos modos (fig. 8).

El piloto verde de modo indica el modo seleccionado.

- 2 Modo alto: modo de plena potencia diseñado para usuarios adultos.

- 3 Modo bajo: modo con potencia reducida para enseñar e introducir a los niños en la rutina del cepillado.

Características

KidTimer

El KidTimer reproduce un sonido festivo al final de cada tiempo de cepillado predeterminado. Además, el KidTimer apaga automáticamente el mango cuando se completa el ciclo de cepillado.

En el modo alto, el KidTimer está configurado en 2 minutos.

En el modo bajo, el KidTimer está configurado en 1 minuto y aumentará poco a poco con el paso del tiempo. La progresión del tiempo ayuda a los niños más pequeños a alcanzar los dos minutos de cepillado recomendados por los dentistas.

Nota: Enseñe a su hijo a cepillarse los dientes hasta que escuchen el tono festivo y el cepillo se apague.

KidPacer

El KidPacer utiliza una serie de notas musicales para alertar al usuario de que debe cambiar al siguiente cuadrante de la boca. Esto asegura que el niño consiga una limpieza minuciosa y total. Consulte la sección "Instrucciones de cepillado".

Easy-start

- 1 El cepillo Sonicare infantil viene con la función Easy-start activada.

- 2 La función Easy-start aumenta paulatinamente la potencia a lo largo de los primeros 14 cepillados.

Nota: Los 14 primeros cepillados deben tener una duración de al menos 1 minuto para avanzar adecuadamente por el ciclo ascendente de Easy-start.

Cómo desactivar o activar la función Easy-start

- 1 Fije el cabezal del cepillo al mango.

- 2 Coloque el mango en el cargador enchufado.